



**LUBRICATION &  
MAINTENANCE  
GUIDE**

**920 & 930  
WHEEL LOADERS**

---

<b>SERIAL</b>	<b>41J1-41J1310</b>	<b>79J1-79J1479</b>
<b>NUMBERS</b>	<b>75J1-75J1084</b>	<b>41K1-41K2039</b>
	<b>62K1-62K3039</b>	