



# Manual de Operação e Manutenção

---

## **Garfos de tubo e poste (Personalizado)**

---

DHC1-e Acima (930H)  
MJC1-e Acima (938H)  
A6D1-e Acima (966H)  
A7D1-e Acima (972H)  
CRD1-e Acima (938GII)  
K5K1-e Acima (950H)  
K6K1-e Acima (962H)  
AWP1-e Acima (972GII)  
AXR1-e Acima (950GII)  
TWR1-e Acima (930G)  
AXS1-e Acima (962GII)  
ANT1-e Acima (966GII)  
AXX1-e Acima (950GII)  
ANY1-e Acima (972GII)  
ANZ1-e Acima (966GII)