



# Manual de Operación y Mantenimiento

---

## **Horquillas de Tubo y Polo (de fabricación especial)**

---

DHC1-y sig. (930H)  
MJC1-y sig. (938H)  
A6D1-y sig. (966H)  
A7D1-y sig. (972H)  
CRD1-y sig. (938GII)  
K5K1-y sig. (950H)  
K6K1-y sig. (962H)  
AWP1-y sig. (972GII)  
AXR1-y sig. (950GII)  
TWR1-y sig. (930G)  
AXS1-y sig. (962GII)  
ANT1-y sig. (966GII)  
AXX1-y sig. (950GII)  
ANY1-y sig. (972GII)  
ANZ1-y sig. (966GII)