



# Operation and Maintenance Manual

---

## Cat® Grade Control for Soil Compactors

---

L8H 1-UP (Machine)	S56 1-UP (Machine)	GP5 1-UP (Machine)
LHC 1-UP (Machine)	484 1-UP (Machine)	PM5 1-UP (Machine)
MMS 1-UP (Machine)	P56 1-UP (Machine)	507 1-UP (Machine)
LCF 1-UP (Machine)	485 1-UP (Machine)	M56 1-UP (Machine)
LCB 1-UP (Machine)	CW6 1-UP (Machine)	508 1-UP (Machine)
L7B 1-UP (Machine)	486 1-UP (Machine)	MP6 1-UP (Machine)
CPX 1-UP (Machine)	S66 1-UP (Machine)	509 1-UP (Machine)
L9H 1-UP (Machine)	487 1-UP (Machine)	M68 1-UP (Machine)
C64 1-UP (Machine)	CS8 1-UP (Machine)	510 1-UP (Machine)
L8C 1-UP (Machine)	488 1-UP (Machine)	CM6 1-UP (Machine)
CS6 1-UP (Machine)	P68 1-UP (Machine)	C74 1-UP (Machine)
544 1-UP (Machine)	489 1-UP (Machine)	B7M 1-1 (Machine)
546 1-UP (Machine)	CS4 1-UP (Machine)	512 1-UP (Machine)
437 1-UP (Machine)	490 1-UP (Machine)	CP7 1-UP (Machine)
438 1-UP (Machine)	P74 1-UP (Machine)	513 1-UP (Machine)
439 1-UP (Machine)	491 1-UP (Machine)	M78 1-UP (Machine)
684 1-UP (Machine)	CB7 1-UP (Machine)	518 1-UP (Machine)
441 1-UP (Machine)	492 1-UP (Machine)	TF6 1-UP (Machine)
744 1-UP (Machine)	S78 1-UP (Machine)	CM7 1-UP (Machine)
443 1-UP (Machine)	493 1-UP (Machine)	J76 1-UP (Machine)
CS5 1-UP (Machine)	505 1-UP (Machine)	
482 1-UP (Machine)	G54 1-UP (Machine)	
P54 1-UP (Machine)	5M4 1-UP (Machine)	
483 1-UP (Machine)	506 1-UP (Machine)	