

## Parts Manual

Face Shovel Buckets (6030/6040/6050/6060)

A8Z1-UP (Backwall) P6J1-UP (Backwall) R6M1-UP (Clam)

## Product and Dealer Information

Note: For product identification plate locations, see the section "Product Identification Information" in the Operation and Maintenance Manual.

Delivery Da	ate:					
Produc	t Information					
Model:						
Product Ide	entification Number:					
Engine Ser	ial Number:					
Transmissio	on Serial Number:					
Generator	Serial Number:					
Attachment	Serial Numbers:					
Attachment	Information:					
Customer I	Equipment Number:					
Dealer Equ	iipment Number:					
Dealer	Information					
Name:	Branch:					
Address:						
	Dealer Contact	Phone Number	<u>Hours</u>			
Sales: -						
Parts: -						
Service: -						