



# Operation and Maintenance Manual

---

## **303.5E2 CR , 304E2 CR, 305E2 CR , 305.5E2 CR Mini Hydraulic Excavators**

---

CR6 1-UP (303.5E2 CR)  
DWD 1-UP (303.5E2 CR)  
FC2 1-UP (304E2 CR)  
KC4 1-UP (304E2 CR)  
PYR 1-UP (305E2 CR)  
R5C 1-UP (305E2 CR)  
SHW 1-UP (305.5E2 CR)  
HRX 1-UP (305.5E2 CR)

Language: Original Instructions