



Operation and Maintenance Manual

306, 306.5 Mini Hydraulic Excavator

GW6 1-UP (306.5)
GW5 1-UP (306)
6G6 1-UP (306)
6W6 1-UP (306)

Language: Original Instructions



Scan to find and purchase genuine Cat® parts and related service information.



Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards, including human factors that can affect safety. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you verify that you are authorized to perform this work, and have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

A non-exhaustive list of operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Caterpillar cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. You must not use this product in any manner different from that considered by this manual without first satisfying yourself that you have considered all safety rules and precautions applicable to the operation of the product in the location of use, including site-specific rules and precautions applicable to the worksite. If a tool, procedure, work method or operating technique that is not specifically recommended by Caterpillar is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that you are authorized to perform this work, and that the product will not be damaged or become unsafe by the operation, lubrication, maintenance or repair procedures that you intend to use.

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Cat dealers have the most current information available.

NOTICE

When replacement parts are required for this product Caterpillar recommends using original Caterpillar® replacement parts.

Other parts may not meet certain original equipment specifications.

When replacement parts are installed, the machine owner/user should ensure that the machine remains in compliance with all applicable requirements.

In the United States, the maintenance, replacement, or repair of the emission control devices and systems may be performed by any repair establishment or individual of the owner's choosing.

Table of Contents

Foreword	5	Slope Operation	37
Safety Section		Equipment Lowering with Engine Stopped	38
Safety Messages	7	Sound Information and Vibration Information ..	38
Additional Messages	14	Operator Station	41
General Hazard Information.....	17	Guards (Operator Protection)	41
Crushing Prevention and Cutting Prevention..	20	Product Information Section	
Burn Prevention.....	21	General Information	43
Fire Prevention and Explosion Prevention.....	21	Identification Information.....	132
Fire Safety	24	Operation Section	
Fire Extinguisher Location.....	25	Before Operation	137
Track Information	25	Machine Operation	141
High Pressure Fuel Lines	26	Engine Starting.....	235
Electrical Storm Injury Prevention.....	26	Operation.....	237
Before Starting Engine	26	Operating Techniques	241
Visibility Information	27	Parking	282
Restricted Visibility	27	Transportation Information	286
Restricted Visibility	29	Towing Information	312
Engine Starting.....	32	Engine Starting (Alternate Methods).....	315
Before Operation.....	32	Maintenance Section	
Work Tools.....	32	Maintenance Access	317
Operation.....	33	Lubricant Viscosities and Refill Capacities ...	319
Engine Stopping	36	Maintenance Support	326
Lifting Objects.....	36	Maintenance Interval Schedule.....	332
Demolition	36	Warranty Section	
Parking	37	Warranty Information.....	413
		Reference Information Section	