## Parts Manual

## HM2615, HM2615 BL, HM3013, HM4015, HM4015 BL, HM4815, HM5515 HM6015 Mulching Heads

B761-UP (HM2615) BF31-UP (HM4015) B831-UP (HM3013) B841-UP (HM4815) B871-UP (HM5515) B881-UP (HM6015)



Scan to find and purchase genuine  $\mbox{Cat}^{\mbox{$\mathbb{8}$}}$  parts and related service information.



## Product and Dealer Information

Note: For product identification plate locations, see the section "Product Identification Information" in the Operation and Maintenance Manual.

Delivery Date: \_\_\_\_\_

## **Product Information**

Model:			
Product Identification Number:			
Engine Serial Number:			
Transmission Serial Number:			
Generator Serial Number:			
Attachment Serial Numbers:			
Attachment Information:			
Customer Equipment Number:			
Dealer Equipment Number:			
Dealer	Information		
Name:		Branch:	
Address:			
	Dealer Contact	Phone Number	Hours
Sales: –			
Parts: –		·	
Service: -			