

Tool Operating Manual

i06013129

464-0265 Lifting Bracket Assembly

SMCS Code: 0374; 0599; 0629; 0632; 0700; 0708; 1353

Caterpillar Products
All

Table of Contents

Introduction	1
Literature Information	2
Safety Section	2
General Information Section	2
Operation Section	2
Maintenance Section	2
Service Parts Section	2
Safety Icon Nomenclature	2
Personal Protection/Important Information	2
Prohibited Action	2
Hazard Avoidance	2
Safety Section	3
Additional Contact Information	3
General Information	3
Introduction	3
Specifications	4
Nomenclature	4
Operation Section	4
Operation	4
Inspection and Maintenance Section	7
Inspection	7
Service Parts	8
Cleaning	8
Storage	8
Tool Disposal	8

Introduction

Important Safety Information



Illustration 1

g02139237

Think Safety

Most accidents that involve product operation, maintenance, and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills, and tools to perform these functions properly.

Improper operation, lubrication, maintenance, or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance, or repair on this product until you have read and understood the Tool Operating Manual.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING", or "CAUTION". The Safety Alert "WARNING" label is shown below.

A non-exhaustive list of operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Caterpillar cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method, or operating technique that is not recommended by Caterpillar is used, the operator must be sure that the procedures are safe. The operator must also be sure that the product will not be damaged or made unsafe by any unspecified procedures.

The information, specifications, and illustrations in this publication are based on information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job.

When replacement parts are required for this product Caterpillar recommends using Caterpillar replacement parts or parts with equivalent specifications including, but not limited to, physical dimensions, type, strength, and material.

Literature Information

This manual contains safety information, operation instructions and maintenance information and should be stored with the tool group

Some photographs or illustrations in this publication may show details that can be different from your service tool. Guards and covers might have been removed for illustrative purposes.

Continuing improvement and advancement of product design might have caused changes to your service tool, which are not included in this publication.

Whenever a question arises regarding your service tool or this publication, consult Dealer Service Tools (DST) for the latest available information.

Safety Section

The Safety Section lists basic safety precautions.

Read and understand the basic precautions listed in the Safety section before operating or performing maintenance and repair on this service tool.

General Information Section

The General Information Section describes tooling functions and features. The section provides useful information on individual parts, additional tooling, and resources.

Operation Section

The Operation Section is a reference for the new operator and a refresher for the experienced operator.

Photographs and illustrations guide the operator through correct procedures for using the tool group.

Operating techniques outlined in this publication are basic. Skill and techniques develop as the operator gains knowledge of the service tool and the tools capabilities.

Maintenance Section

The Maintenance Section is a guide to tool inspection, cleaning, storage, and tool disposal.

Service Parts Section

The Service Parts Section is a reference for parts identification and available part numbers.

Safety Icon Nomenclature

Personal Protection/Important Information

-  Read the manual
-  Eye protection
-  Ear protection
-  Face protection
-  Inspect equipment

Illustration 2




g02166423

Personal Protection/Important Information

Prohibited Action

-  No Smoking –

Hazard Avoidance

-  Crushing Hazard (foot) –
-  Crushing Hazard (hand) –
-  Pinch Point –



Fire Hazard –



Electrical Shock - Hazard –



Fire Hazard –

Safety Section

WARNING

DO NOT OPERATE OR WORK ON THIS MACHINE UNLESS YOU HAVE READ AND UNDERSTAND THE INSTRUCTIONS AND WARNINGS IN THE OPERATION AND MAINTENANCE MANUALS. FAILURE TO FOLLOW THE INSTRUCTIONS OR HEED THE WARNINGS COULD RESULT IN INJURY OR DEATH. CONTACT ANY CATERPILLAR DEALER FOR REPLACEMENT MANUALS. PROPER CARE IS YOUR RESPONSIBILITY.

WARNING

To avoid injury do not stand on or between implement and machine while operating lift control.

Additional Contact Information

For additional product support questions concerning this tool, contact the Dealer Service Tools Hotline at:

USA: 1-800-542-8665, Option 1

International: 1-309-578-7372

General Information

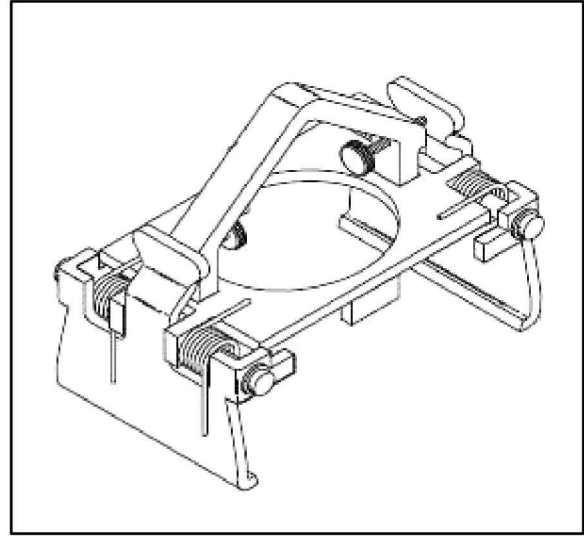


Illustration 3

g03772908

Introduction

The 464-0265 Lifting Bracket Assembly is designed to lift AMOC (Advanced Modular Cooling) and Aluminum Modular Radiators (AMR) style radiator cores for removal, service, and installation. It is used with a suitable overhead lifting device on any vehicle using AMOC / AMR radiator cores.

Note: Refer to the appropriate Disassembly and Assembly Manual for mounting and lifting hardware and correct location of the lifting point.