



Navodila za upravljanje in vzdrževanje

MP15 , MP20, MP30 , MP40 Multiprocesorji

M2W 1-UP (MP15)
MPD 1-UP (MP15)
M2X 1-UP (MP20)
MPF 1-UP (MP20)
M2Y 1-UP (MP30)
MPH 1-UP (MP30)
M2Z 1-UP (MP40)
MPJ 1-UP (MP40)
JMW 1-UP
(MULTIPROCESORJI)
JMX 1-UP
(MULTIPROCESORJI)
JMY 1-UP
(MULTIPROCESORJI)
JMZ 1-UP
(MULTIPROCESORJI)

Jezik: izvirna navodila