

VOLUME I Pages 1-488

Parts Manual



545 Wheel Skidder

2FZ1-Up (Machine) 6NC1-Up (Engine) 5MY1-Up (Transmission) 5WT1-Up (Torque Converter)