

Parts Manual



See "General Information"
for New Parts Manual
Features.

Corn Heads

2DZ1-Up (Combine Header)
2XZ1-Up (Combine Header)
2ZZ1-Up (Combine Header)
8DZ1-Up (Combine Header)
9LZ1-Up (Combine Header)
BAH1-Up (Combine Header)