Parts Manual

545C Wheel Skidder

5451-UP (Machine)

KHX1-UP (Engine)

5MY1-UP (Transmission)

R1C1-UP (Transmission)

R1F1-UP (Transmission)

5WT1-UP (Torque Converter)

Powered By C7 Engine





Product and Dealer Information

Note: For product identification plate locations, see the section "Product Identification Information" in the Operation and Maintenance Manual.

| Delivery Da | ate: | | | | | |
|-------------|----------------------|--------------|--------------|--|--|--|
| Produc | t Information | | | | | |
| Model: | | | | | | |
| Product Ide | entification Number: | | | | | |
| Engine Ser | ial Number: | | | | | |
| Transmissio | on Serial Number: | | | | | |
| Generator | Serial Number: | | | | | |
| Attachment | Serial Numbers: | | | | | |
| Attachment | Information: | | | | | |
| Customer I | Equipment Number: | | | | | |
| Dealer Equ | iipment Number: | | | | | |
| Dealer | Information | | | | | |
| Name: | Branch: | | | | | |
| Address: | | | | | | |
| | | | | | | |
| | | | | | | |
| | Dealer Contact | Phone Number | <u>Hours</u> | | | |
| Sales: - | | | | | | |
| Parts: - | | | | | | |
| Service: - | | | | | | |