



Parts Manual

525C Wheel Skidder

5251-Up (Machine)
KHX1-Up (Engine)
EBR1-Up (Transmission)
R1B1-Up (Transmission)
R1C1-Up (Transmission)
R1E1-Up (Transmission)
R1F1-Up (Transmission)
WSL1-Up (Transmission)
5WT1-Up (Torque
Converter)

Powered By C7 Engine