



# Parts Manual

---

## 527 Track Skidder

---

JSR1-Up (Machine)  
PTR1-Up (Machine)  
H4G1-Up (Engine)  
2ZY1-Up (Transmission)  
JLB1-Up (Bulldozer)  
PWJ1-Up (Bulldozer)  
SBF1-Up (Bulldozer)  
4RT1-Up (Torque  
Converter)

Powered By 3304 Engine