



Parts Manual

TH35-C11I Petroleum Power Train Package

GLS1-Up (Engine)
HRA1-Up (Engine)
PBZ1-Up (Package)
SMS1-Up (Transmission)
T1C1-Up (Torque
Converter)
T1K1-Up (Torque
Converter)
T7K1-Up (Torque
Converter)
TCZ1-Up (Torque
Converter)