



# Parts Manual

---

## 980H Wheel Loader

---

KZL1-UP (Machine)  
LHX1-UP (Engine)  
TXG1-UP (Engine)  
REB1-UP (Transmission)  
WHL1-UP (Transmission)  
3JT1-UP (Torque Converter)  
4FT1-UP (Torque Converter)  
TCA1-UP (Torque Converter)