

SEBU5777

**SUPPLEMENT
To
OPERATION & MAINTENANCE
INSTRUCTIONS
For
MACHINES POWERED BY
3300 SERIES ENGINES WITH DIRECT
INJECTION FUEL SYSTEMS**

This publication provides information on the 3300 Series Direct Injection Engine, which is not covered in the "Operator's" and "Lubrication & Maintenance" Guides for this machine.

Refer to the Guides for your machine for operation and lubrication and maintenance information not covered in this Supplement.

Table of Contents

Operation Section

Starting the Engine	2
Above 0°C (32°F)	2
Below 0°C (32°F)	3

Maintenance Section

When Required

Priming the Fuel System	4
Changing Ether Starting Aid Cylinders	6


Operation Section

Starting the Engine Above 0°C (32°F)

1. Fasten and adjust seat belt.




2. Lower all implements and move all implement controls to HOLD.

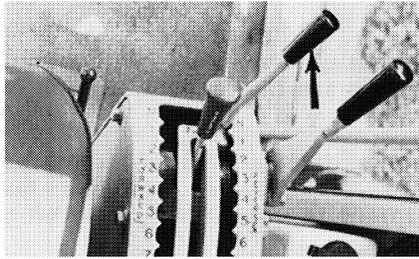

3. Place transmission lever in NEUTRAL. Engage TRANSMISSION LOCK LEVER.

4. Engage PARKING BRAKE.

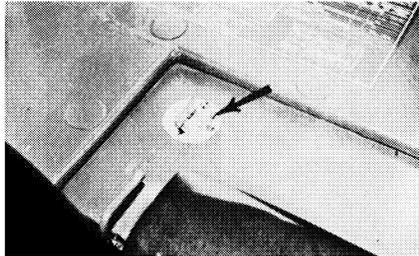

5. Turn DISCONNECT SWITCH to ON.

CAUTION
NEVER turn the disconnect switch to OFF with the engine running.