



# Operation and Maintenance Manual

---

**D3C Series III, D4C Series III, D5C  
Series III HYSTAT Track-Type Tractors**

---



Scan to find and purchase genuine Cat® parts and related service information.



## Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

**Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.**

**Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.**

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "WARNING" as shown below.



The meaning of this safety alert symbol is as follows:

**Attention! Become Alert! Your Safety is Involved.**

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

Operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

**Caterpillar cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by Caterpillar is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the product will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.**

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Caterpillar dealers have the most current information available. For a list of the most current publication form numbers available, see the Service Manual Contents Microfiche, REG1139F.

## Table of Contents

Foreword .....	4	Operating Techniques .....	49
<b>Safety Section</b>		Machine Adjustments .....	55
Warning Signs and Labels .....	6	Machine Parking.....	57
General Hazard Information.....	10	Transportation Information .....	60
Crushing Prevention and Cutting Prevention..	12	Towing Information .....	62
Burn Prevention.....	12	<b>Maintenance Section</b>	
Fire Prevention and Explosion Prevention.....	13	Torque Specifications .....	66
Electrical Storm Injury Prevention.....	14	Cooling System Specifications.....	69
Mounting and Dismounting .....	14	Fuel Specifications .....	77
Before Starting Engine .....	14	Lubricant Specifications .....	85
Engine Starting.....	15	Lubricant Viscosities and Refill Capacities .....	96
Before Operating Machine .....	15	Maintenance Interval Schedule.....	98
Machine Operation .....	15	<b>Reference Information Section</b>	
Machine Parking.....	16	Reference Materials .....	135
Equipment Lowering with Engine Stopped .....	16	<b>Index Section</b>	
Sound Information and Vibration Information .	16	Index.....	136
<b>Product Information Section</b>			
Model Views .....	17		
Product Identification Information .....	19		
<b>Operation Section</b>			
Monitoring Systems and Cab Features.....	21		
Machine Controls .....	34		
Before Starting Engine .....	38		
Engine Starting.....	40		
Machine Operation .....	46		