

Operation and Maintenance Manual

LEXION 470, LEXION 480 and LEXION 485 Combines

9TW1-Up (Machine)
2BZ1-Up (Machine)
8ZW1-Up (Machine)

Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

Operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Caterpillar cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by Caterpillar is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the product will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Caterpillar dealers have the most current information available. For a list of the most current publication form numbers available, see the Service Manual Contents Microfiche, REG1139F.



When replacement parts are required for this product Caterpillar recommends using Caterpillar replacement parts or parts with equivalent specifications including, but not limited to, physical dimensions, type, strength and material.

Failure to heed this warning can lead to premature failures, product damage, personal injury or death.

Table of Contents

Foreword	4	Machine Adjustments	335
Safety Section		Operational Problems and Remedies	377
Safety Signs and Labels	6	Machine Parking	390
General Hazard Information	18	Transportation Information	394
Crushing Prevention and Cutting Prevention	20	Towing Information	398
Burn Prevention	21	Maintenance Section	
Fire Prevention and Explosion Prevention	22	Torque Specifications	400
Fire Extinguisher Location	24	S-O-S Fluid Analysis	403
Tire Information	24	Lubricant Viscosities and Refill Capacities	404
Electrical Storm Injury Prevention	25	Maintenance Interval Schedule	406
Mounting and Dismounting	25	Reference Information Section	
Before Starting Engine	25	Reference Materials	556
Engine Starting	25	Service Information Section	
Before Operation	26	Troubleshooting	557
Operation	27	Index Section	
Parking	28	Index	573
Product Information Section			
Model Views and Specifications	29		
Machine General Information	39		
Product Identification Information	40		
Operation Section			
Monitoring Systems and Cab Features	42		
Machine Controls	74		
Combine Electronic Board Information System	86		
Information Monitor	220		
Auxiliary Equipment Connections	312		
Before Starting Engine	314		
Engine Starting	316		
Machine Operation	320		