



Operation and Maintenance Manual

**Challenger 35, Challenger 45,
Challenger 55 Agricultural Tractors**



Scan to find and purchase genuine Cat® parts and related service information.



Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

Operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Caterpillar cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by Caterpillar is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the product will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Caterpillar dealers have the most current information available. For a list of the most current publication form numbers available, see the Service Manual Contents Microfiche, REG1139F.



When replacement parts are required for this product Caterpillar recommends using Caterpillar replacement parts or parts with equivalent specifications including, but not limited to, physical dimensions, type, strength and material.

Failure to heed this warning can lead to premature failures, product damage, personal injury or death.

Table of Contents

Foreword	4	Drawbar	87
Safety Section		Power Take-Off (PTO).....	92
Safety Signs and Labels.....	6	Three-Point Hitch	96
General Hazard Information.....	11	Before Starting Engine	111
Crushing Prevention and Cutting Prevention..	13	Engine Starting.....	112
Burn Prevention.....	13	Machine Operation	117
Fire Prevention and Explosion Prevention.....	14	Operating Techniques	118
Fire Extinguisher Location.....	15	Machine Adjustments	124
Electrical Storm Injury Prevention	15	Machine Parking.....	142
Mounting and Dismounting	15	Transportation Information	143
Before Starting Engine	15	Towing Information	146
Engine Starting.....	16	Maintenance Section	
Before Operating Machine	16	Torque Specifications	147
Machine Operation	16	Cooling System Specifications.....	149
Machine Parking.....	17	Fuel Specifications	158
Product Information Section		Lubricant Specifications	166
Model Views	18	Lubricant Viscosities and Refill Capacities ...	176
Machine General Information.....	27	Maintenance Interval Schedule.....	178
Product Identification Information	28	Reference Information Section	
Operation Section		Reference Materials	238
Monitoring Systems and Cab Features.....	30	Service Information Section	
Machine Controls	64	Troubleshooting.....	240
Implement Controls	75	Index Section	
Auxiliary Equipment Connections	78	Index.....	262
Implement Connections	81		