



# Operation and Maintenance Manual

---

## **HF181, HF201 and HF221 Felling Heads**

---

CFG279-Up (Machine)  
BAL250-Up (Machine)  
CKL356-Up (Machine)  
BXX1-Up (Machine)  
PAJ328-Up (Machine)  
PAM100-Up (Machine)