

PowerView Recorder System (LDARS/LDVR)

User's Manual
100650-000 AA4



© Copyright 2014 Progress Rail Services. All rights reserved. This copyrighted document may be reproduced free of charge by Progress Rail Services customers, if such reproduction is used exclusively in that customer's internal operation.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the user's purposes, the matter should be referred to Progress Rail Services. Any applicable Federal, State or local regulations or company safety or operating rules must take precedence over any instructions given in this material. Progress Rail Services has no obligation to keep the material up to date after the original publication.

THERE ARE NO WARRANTIES OF ACCURACY, MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE.